

# estos ECSTA for Avaya CS1000

---


4.0.9.4411

1	Introduction .....	4
2	Software requirements .....	6
3	Communications Server .....	7
3.1	General Settings .....	7
3.2	TAPI Lines .....	8
3.3	Location Settings .....	8
3.3.1	Phone number formatting .....	9
3.4	Advanced Settings .....	11
3.5	Licences .....	11
4	Configure Network Routing Service .....	12
4.1	Configuration details for Avaya CS1000 Version 6.5 and earlier versions .....	12
4.2	Configuration details for Avaya CS1000 Version 7.0 and later versions .....	12
5	Configure CS1000 node .....	14
5.1	Configuration details for Avaya CS1000 Version 6.5 and earlier versions .....	14
5.2	Configuration details for Avaya CS1000 Version 7.0 and later versions .....	14
6	CS detail configuration .....	16
7	Supported TAPI functions .....	20
8	Info about estos ECSTA for Avaya CS1000 .....	23



# 1 Introduction

estos ECSTA for Avaya CS1000 offers multiple Telephony Service Providers for Microsoft® TAPI 2.1 (also 2.2 and 3.0). These TAPI drivers implement a central communication between a PC (CTI Server) and the Telephony system (PBX). On the CTI Server, all devices from the PBX are shown as TAPI lines. All estos ECSTA for Avaya CS1000 drivers use the powerful CSTA Interface to communicate with the PBX.

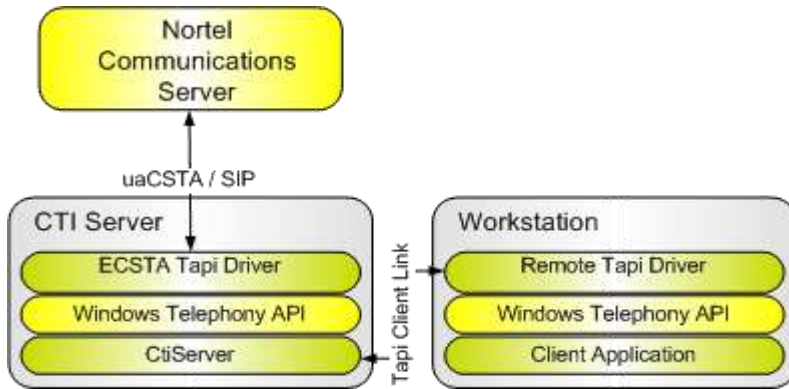

## Supported PBX systems

All systems of the Avaya Communications Server 1000 / Meridian / Succession family.

PBX	Driver
CS 1000	ECSTA for Avaya
CS 2000	ECSTA for Avaya
CS 2100	ECSTA for Avaya

## Installation

The driver is installed using a Microsoft® Installer setup.

1. Setup for Communications Server

## Multiple PBX systems

If you want to connect multiple CS1000 nodes or different service domains, you can install the driver several times.

This is done using the 'Advanced Phone and Modem Options'. This program was installed with the driver and is located in the Control Panel.

## Supported Operating systems

These are described in Software requirements.

## Using in the network

After installing the driver, you may use all configured line devices on the server as TAPI-lines. If you are using a server based CTI Software, you may install it now. To have the TAPI-devices available on all workstations, the TAPI-driver must be distributed in the network. There are the following options:

1. estos UCServer  
The estos UCServer is a CTI/UCC server software which distributes the telephony informations

across the network using a graphical client or a multiline TAPI driver. Workgroups, domains, Active Directory® and Terminal Server are supported.

2. estos CallControlGateway

The estos CallControlGateway for Lync/OCS is a gateway that connects the TAPI-lines with the Lync/OCS server. This enables the Lync/OCS client to use traditional telephone devices via Remote Call Control (RCC).

3. Windows® Telephony Server

The Windows® Telephony Server is a component of Windows® server operating systems since Windows® NT. You will need a domain. The service is limited to domain users.

## 2 Software requirements

The estos ECSTA for Avaya CS1000 can be installed on all Windows® systems that support Microsoft® TAPI 2.0 or higher. The following systems are supported in 32- as well as in 64-bit versions.

- Windows® 7
- Windows® 8
- Windows® 8.1
- Windows® 10
- Windows Server® 2008
- Windows Server® 2008 R2
- Windows Server® 2012
- Windows Server® 2012 R2

## 3 Communications Server

In the arrangement of the driver with a CS1000, proceed as follows:

1. Check network connection  
Test availability of the CS1000 node or the NRS (ping hostname / IP Adresse).
2. Configuration of the CS1000 node  
Configure the SIP Cti service in the CS1000 node over the Element Manager. See CS1000 node configuration.
3. Configuration of the Network Routing Service (Optional)  
Configure Gateway Endpoints in the NRS. See Configure Network Routing Service.
4. Additional instruction regarding the configuration of the CS1000 participants and the overall system (Version 7.x)  
Various settings in CS1000 must be set properly in addition to the connection configuration itself.  
See Configuration Details.
5. Driver installation  
See also Settings

### 3.1 General Settings

The connection to the PBX system is established using SIP / TCP.

The connection is established either directly to a CS1000 node or to a Network Routing Service (NRS).

#### Connect to Communications Server

This is a direct connection to the CS1000 node. Input the IP address of the CS1000 server nodes here. The standard TCP Port for the SIP connection is 5060.

See also configuring CS1000 Node.

#### Connect to Network Routing Service

Input the IP address of the primary and optionally the secondary NRS here. The standard TCP Port for the SIP connection is 5060.

Connection over the NRS requires the configuration of the CS1000 node sip URI and the ECSTA gateways sip URI.

- ECSTA Gateway sip URI  
Input the sip URI of the gateway Endpoint, that is configured in the NRS for this instance of the ECSTA.  
Example: sip:ecsta@service\_domain  
See also configuring Network Routing Service.

#### CS1000 Node sip URI

Input the sip URI of the CS1000 node, for the devices that are supposed to be used over this instance of the ECSTA. The sip URI Endpoint consists of the sip Gateway Endpoint Name from the CS1000 node configuration and the service domain.

See also configuring CS1000 Node.

The CS1000 node must be registered in the NRS configuration under gateway Endpoints.

Example: sip:SS\_SIP@service\_domain

See also configuring Network Routing Service.

#### Link to interface IP / TCP port

For SIP communication an IP port is required. This is automatically registered in the Windows® Firewall.

You can link the SIP communication to a specific IP interface. Please note that the IP interface used must be located on the same network segment as the CS1000 node or the NRS.

## 3.2 TAPI Lines

Please add all Lines, that should be available as TAPI lines on the PC.

Manual Add/Remove Lines:

Please enter the internal dialing numbers and the name of the telephony device.

Load Lines from PBX:

All known device numbers are queried from the PBX system. All devices are queried that are in the range set in Advanced Settings.

Import text:

You may import simple text files with the line numbers and names. The content of the text file should be one extension (line) in each line of text. The separator is automatically detected. Example of text file content:

100,Extension 100

101,Office

102,Secretary

Export text:

You may export the actual line configuration to a text file.

Attention:

After the installation of the driver it may be necessary to restart the computer.

Location

You can enter the number of the line in supercanonical format e.g. *+49(30)12345-123*. You should use the supercanonical number format if you are using several instances of Tapi drivers and connecting to several PBX systems at the same time. In this case you should configure the data in the location dialog.

Please note that the entry is in accordance with the following example. The internal extension has to be separated from the remainder with the minus sign '-'. If the connected PBX systems have no consistent numbering plan, you would get duplicate internal extensions as tapi lines. In the location dialog you may enter the following data.

- Country Code  
The country code for Germany is 49, for the USA 1, for Switzerland 41. You can find more country codes in the telephone directory.
- Area code  
The area code is only necessary in countries where it exists.
- PBX phone number  
The PBX number is the remaining part between the area code and the direct access number.

The components and assemblies of an area code are: +country code(area code)PBX phone number-internal extension.

## 3.3 Location Settings

The phone numbers of the telephone system are defined in the Location Settings

Phone Number Range

Indicate here which internal phone numbers exist in the phone system. This information is used to determine the available lines from the phone system.

phone-context of the telephone URI

Enter the phone-context, that is used for addressing the phone devices. This is either the domain or



'dialstring'.

Each phone device is represented by a tel URI. This is for example: tel:12345;phone-context=dialstring.

#### Location

Indicate here which international phone numbers precede the internal extension numbers.

The input of this location information should only be carried out if you use several driver instances and have connected several telephone systems. This location information can only be configured when the option Use Location is switched on. If you enter a location here, all extension phone numbers are entered fully international.

Example: With location information '49(89)1234' the extension '100' is formatted as '49(89)1234-100'.

#### Phone Number Format

The phone number registered from the driver at the application can be changed with rules. Moreover, you can also change phone numbers sent by the PC to the telephone system. See Phone number formatting.

### 3.3.1 Phone number formatting

You may enter rules for formatting the phone numbers.

The phone numbers that are reported from the PBX system to the PC and the numbers that are sent from the PC to the PBX system may be modified with a Search and Replace function.

The phone numbers that are sent from the Tapi Application to the PBX (make call) may be modified as well.

Each line in the list contains an option if direct text compare or a regular expression is used.

The Search and Replace function uses regular expressions. If a search pattern matches, the result from replace with will be used as output. If the search pattern does not match, the original number will be reported unchanged. The entries in the list are processed one after each other. If one match is found the remaining entries will be ignored.

A differentiation is made between categories:

- Incoming  
Phone numbers for incoming calls which are reported to the PC by the phone system are formatted with these rules.
- Outgoing  
Numbers for outgoing calls which are reported to the PC by the phone system are formatted with these rules.
- PC dialling  
This section is for phone numbers that are dialed on the PC and sent to the PBX system

Search for:

Enter the regular expression that will be used to find a phone number.

Hint: The caret (^) can be found on the upper left key of a keyboard with German layout.

A brief overview of the permitted expressions:

Character	Description
^	The beginning of the search string (phone number). The expression "^0" matches '0' only at the beginning of the search string.

^	The caret (^) immediately following the left-bracket ([]) has a different meaning. It is used to exclude the remaining characters within brackets from matching the target string. The expression "[^0-8]" indicates that the target character should not be 0
\$	The dollar sign (\$) will match the end of the string. The expression "152\$" will match the sub-string "152" only if it is at the end of the string.
	The alternation character ( ) allows either expression on its side to match the target string. The expression "1 2" will match '1' as well as '2'.
.	The dot (.) allows any character (or any number).
*	The asterisk (*) indicates that the character to the left of the asterisk in the expression should match 0 or more times.
+	The plus (+) is similar to an asterisk but there should be at least one match of the character to the left of the + sign in the expression.
?	The question mark (?) matches the character to its left 0 or 1 times.
()	The parenthesis affects the order of pattern evaluation and also serves as a tagged expression that can be used when replacing the matched sub-string with another expression.
[]	The corner brackets ([ and ]) indicates the amount of signs that are permitted at this point.

Replace with:

Enter the expression that defines how the number is to be formatted.

\1 represents the first matched expression enclosed by parentheses '(')' from the *search pattern* field.

\2 the second ...

Check:

You may check your expressions right here by entering a phone number in the indicate field. The resulting output will be displayed. If the expression from the search pattern is not found, the phone number will be send to the output without modification.

Examples:

Effect	Search for	Replace with
Removal of a leading 0	^0(.*)	\1
Replacing a 80 at the beginning of a number (e.g. targeted external dialling code) with 0	^80(.*)	0\1
Removal of a private PIN which is added to the beginning of a phone	^50[0-9][0-9][0-	\1

number as 50xxx	9](.*)	
Suppress all internal numbers having a 3-digit extension.	^[0-9][0-9][0-9]\$	
Add an external dialling code code (leading 0) for all numbers with more then 3 digits	^([0-9][0-9][0-9].+)	0\1
Add the phone system base number (03012345) to all internal numbers (1 to 3 digits in length)	^([0-9][0-9]?[0-9]?)\$	03012345\1
Adding an area code to all numbers not beginning with 0 and containing at least 4 digits (thus not internal).	^[^0][0-9][0-9][0-9].*)	08151\1

### 3.4 Advanced Settings

#### Snapshot for active calls

The driver can validate existing calls. This prevents that calls are displayed on the PC that do no more exist in the PBX system.

Enter a time interval in seconds.

The higher this value the longer it takes for the driver to detect a hanging call. The lower this value the higher is the load on the PBX.

#### Retry MonitorStart

In case the driver cannot start the monitoring of an extension for example because the extension is not connected to the PBX, the driver will retry the monitoring at regular intervals.

Enter a time interval in seconds.

### 3.5 Licences

The driver can be tested without license for 45 days with 25 lines. After the trial period, the lines can no longer be controlled and monitored. You can purchase license keys that unlock the driver permanently. To purchase licenses, contact your dealer.

The driver can be configured any number of lines. Opening a line consumes a license. If the existing licenses are used up, opening further lines will fail.

If you have configured multiple driver instances, all instances share the licenses entered. You can consume licenses anywhere on different instances.

## 4 Configure Network Routing Service

The connection to the telephone system can be made through the Network Routing Service (NRS). This requires the CS1000 node and the ECSTA driver to be configured as Gateway Endpoints in the corresponding Service Domain.

### 4.1 Configuration details for Avaya CS1000 Version 6.5 and earlier versions

1. Open the Network Routing Service Manager.  
Navigate to the Network Routing Service in CS1000 Element Manager and open the Network Routing Service Manager. Enter user name and password.
2. Switch to Standby DB view  
In order to add a Gateway Endpoint or to change settings, this must be done in the mode standby DB view.
3. Navigate to Configuration - Gateway Endpoints  
Select the Service Domain to be used. Press 'Show'.
4. Check the Gateway Endpoint for the ECSTA Drivers  
You need a Gateway Endpoint to add ECSTA drivers.

Endpoint Name	ecsta (ECSTA Gateway sip URI user part)
Endpoint authentication enabled	Not configured
Static endpoint address type	IP version 4
H.323 Support	H.323 not supported
SIP support	Dynamic SIP endpoint
SIP transport	TCP
SIP port	5260 (ECSTA TCP Listen Port)

- 5.
6. Save the changes  
Under Tools - Database Actions, run 'Cut over and Commit.'

### 4.2 Configuration details for Avaya CS1000 Version 7.0 and later versions

1. Open the Networks Routing Service Manager  
Navigate in the CS1000 Element Manager to Network Routing Service and open the Network Routing Service Manager. Log on.
2. Open the End Points view under Numbering Plans.  
To add a gateway endpoint or to change settings, the Managing mode must be set to the Standby Database Mode. Add a new endpoint under the Gateway Endpoints item.

3. Configure the new gateway endpoint as follows:

Endpoint Name	ecsta (ECSTA Gateway sip URI user part)
Endpoint authentication enabled	Authentication off
Static endpoint address type	IP version 4
H.323 Support	H.323 not supported
SIP support	Dynamic SIP endpoint
SIP mode	Proxy mode
SIP TCP transport enabled	activate
SIP TCP port	5260 (ECSTA TCP Listen Port)

- 4.
5. Save the changes  
Save the settings for the gateway endpoint Execute the Cut Over and then the Commit menu options under System Database.

## 5 Configure CS1000 node

The connection with the PBX system can be established via the Network Routing service (NRS) or directly to a CS1000 node. In any case, the SIP Cti service must be configured in the CS1000 node.

### 5.1 Configuration details for Avaya CS1000 Version 6.5 and earlier versions

1. Open the Element Manager  
Open the
2. Navigating to the CS1000 node.  
Navigate under System - IP Network - Nodes: Servers, Media Cards CS1000 to the node you want to configure. Click 'Edit ...' on the corresponding node
3. Activating the SIP CTI Service  
In SIP, CTI services, please check the following settings:

Service Enabled	aktivieren
Support TLS Endpoints Only	deaktivieren

- 4.
5. Save the changes

### 5.2 Configuration details for Avaya CS1000 Version 7.0 and later versions

1. Open the Element Manager  
Open the
2. Navigating to the CS1000 node.  
Navigate to the CS1000 node that you want to configure under System - IP Network - Nodes: Servers, Media Cards. Open the corresponding node.
3. Open Gateway (SIPGw & H323Gw) under Applications.  
**You will find the SIP URI's domain component for the CS1000 node and for the ECSTA node (for the configuration in ECSTA) under the SIP Domain item.**  
**You will find the SIP URI's user component for the CS1000 node under the Gateway Endpoint Name item (for configuration in ECSTA).**
4. Activating the SIP CTI Service  
Check the following settings under the SIP CTI service:

Enable CTI service	activate
TLS Endpoints only	deactivate
Calling device URI format	Check that the URI notation configured here agrees with the URI notation in ECSTA configured under the Location Phone context.

- 5.

6. Save the changes

## 6 CS detail configuration

1. An Elan 32 must have been programmed (it absolutely must be Elan 32).
- 2.
3. Id 22
- 4.
5. REQ prt
6. TYPE adan elan
7. ADAN ELAN 32
8. CTYP ELAN
9. DES Application
10. N1 512
11. A VAS ID 32 must have been programmed.
- 12.
13. REQ prt
14. TYPE vas
15. VAS
16. VSID 032
17. ELAN 032
18. SECU YES
19. INTL 0001
20. MCNT 9999
21. SIP CTI licenses must be present.
- 22.
23. Id 22
- 24.
25. REQ slt
26. System type is - Communication Server 1000E/CP PMCP PM - Pentium M 1.4 GHz
27. IPMGs Registered: 24IPMGs Unregistered: 0IPMGs Configured/unregistered: 0
- 28.
29. TRADITIONAL TELEPHONES 68 LEFT 59 USED 9
30. DECT USERS 0 LEFT 0 USED 0
31. IP USERS 1305 LEFT 0 USED 1305
32. BASIC IP USERS 0 LEFT 0 USED 0
33. TEMPORARY IP USERS 0 LEFT 0 USED 0
34. DECT VISITOR USER 0 LEFT 0 USED 0
35. ACD AGENTS 940 LEFT 57 USED 883
36. MOBILE EXTENSIONS 5 LEFT 5 USED 0
37. TELEPHONY SERVICES 25 LEFT 25 USED 0
38. CONVERGED MOBILE USERS 0 LEFT 0 USED 0
39. AVAYA SIP LINES 0 LEFT 0 USED 0
40. THIRD PARTY SIP LINES 0 LEFT 0 USED 0
- 41.
42. PCA 40 LEFT 40 USED 0
43. ITG ISDN TRUNKS 0 LEFT 0 USED 0
44. H.323 ACCESS PORTS 20 LEFT 8 USED 12
45. AST 1605 LEFT 358 USED 1247
46. SIP CONVERGED DESKTOPS 0 LEFT 0 USED 0
47. SIP CTI TR87 1225 LEFT 1224 USED 1
48. SIP ACCESS PORTS 1475 LEFT 909 USED 566
49. RAN CON 124 LEFT 124 USED 0
50. MUS CON 300 LEFT 272 USED 28
- 51.
52. IP RAN CON 0 LEFT 0 USED 0
53. IP MUS CON 0 LEFT 0 USED 0



- 54. IP MEDIA SESSIONS 0 LEFT 0 USED 0
- 55. TNS 65535 LEFT 59490 USED 6045
- 56. ACDN 24000 LEFT 23387 USED 613
- 57. AML 16 LEFT 14 USED 2
- 58. IDLE\_SET\_DISPLAY HRG
- 59. LTID 65535 LEFT 65535 USED 0
- 60. RAN RTE 512 LEFT 511 USED 1
- 61. ATTENDANT CONSOLES 65535 LEFT 65535 USED 0
- 62. IP ATTENDANT CONSOLES 0 LEFT 0 USED 0
- 63. BRI DSL 10000 LEFT 10000 USED 0
- 64. DATA PORTS 65535 LEFT 65535 USED 0
- 65. PHANTOM PORTS 65535 LEFT 65508 USED 27
- 66. TRADITIONAL TRUNKS 65535 LEFT 65145 USED 390
- 67. ELC ACCESS PORTS 0 LEFT 0 USED 0
- 68. DCH 254 LEFT 239 USED 15

69. The telephones to be controlled must have the T87A prompt in the Class of Service (T87D is the default).

Likewise, IAPG must have been set to 1 and AST must show the key to be monitored. In this example, the key is 0 and AST is also 0 for that reason.

- 70.
- 71. LD 20
- 72. REQ:PRT
- 73. TYPE:1140
- 74. DES 1140
- 75. TN 188 0 08 01 VIRTUAL
- 76. TYPE 1140
- 77. CDEN 8D
- 78. CTYP XDLC
- 79. CUST 0
- 80. NUID
- 81. NHTN
- 82. CFG\_ZONE 00177
- 83. CUR\_ZONE 00177
- 84. MRT
- 85. ERL 0
- 86. ECL 0
- 87. FDN
- 88. TGAR 0
- 89. LDN NO
- 90. NCOS 7
- 91. SGRP 0
- 92. RNPG 177
- 93. SCI 0
- 94. SSU 0177
- 95. LNRS 20
- 96. XLST 2
- 97. SCPW 1234
- 98. SFLT NO
- 99. CAC\_MFC 0
- 100. CLS TLD FBD WTA LPR PUA MTD FND HTD TDD HFA CRPA
- 101. MWA LMPN RMMD AAD IMD XHD IRD NID OLD VCE DRG1
- 102. POD SLKD CCSD SWD LNA CNDA
- 103. CFTD SFD MRD DDV CNID CDCA MSID DAPA BFED RCBD
- 104. ICDD CDMD MCTD CLBD AUTU
- 105. GPUD DPUD DNDD CFXA ARHD FITD CLTD ASCD
- 106. ABDD CFHD FICD NAID BUZZ AGRD MOAD

107. UDI RCC HBDT AHA IPND DDGA NAMA MIND PRSD NRWD NRCD NROD  
108. DRDD EXR0  
109. USRD ULAD RTDD RBDD RBHD PGND OCBF FLXD FTTC DNDY DNO3 MCBN  
110. FDSO NOVD VOLA VOUA CDMR PRED RECD MCDD T87A SBMD  
111. KEM3 MSNV FRA PKCH MUTA MWTD DVLD CROD ELCD  
112. CPND\_LANG ROM  
113. RCO 0  
114. HUNT  
115. PLEV 02  
116. PUID  
117. UPWD  
118. DANI NO  
119. AST 0  
120. IAPG 1  
121. AACS NO  
122. ITNA NO  
123. DGRP  
124. MLWU\_LANG 0  
125. MLNG FRE  
126. DNDR 0  
127. KEY 00 SCR 330032 3832 MARP  
128. CPND  
129. CPND\_LANG ROMAN  
130. NAME COMS, Room  
131. XPLN 23  
132. DISPLAY\_FMT FIRST, LAST  
133. 01 ADL 20  
134. 02 ADL 20  
135. 03 ADL 20  
136. 04 ADL 20  
137. 05 ADL 20  
138. 06 ADL 20  
139. 07 ADL 20  
140. 08 ADL 20  
141. 09 ADL 20  
142. 10 ADL 20  
143. 11 ADL 20  
144. 12  
145. 13  
146. 14  
147. 15  
148. 16 MWK 330345  
149. 17 TRN  
150. 18 AO6  
151. 19 CFW 20  
152. 20 RGA  
153. 21  
154. 22 RNP  
155. 23 SSU 0177  
156. 24  
157. 25  
158. 26  
159. 27  
160. 28  
161. 29  
162. 30

163. 31

164. DATE 10 DEC 2011

## 7 Supported TAPI functions

The driver offers the following TAPI call control operations.

Action:	Corresponding TAPI function:
Dial	TSPI_lineMakecall
Hang up	TSPI_lineDrop
Answer call	TSPI_lineAnswer
Hold call	TSPI_lineHold
Retrieve call	TSPI_lineUnhold
Redirect call	TSPI_lineRedirect
Blind transfer	TSPI_lineBlindTransfer
Setup transfer	TSPI_lineSetupTransfer
Swap hold	TSPI_lineSwapHold
Complete transfer	TSPI_lineCompleteTransfer (LINETRANSFERMODE_TRANSFER)
Create conference	TSPI_lineCompleteTransfer (LINETRANSFERMODE_CONFERENCE)
DTMF dialing	TSPI_lineGenerateDigits
Add to conference	TSPI_lineAddToConference
Dial in dial tone mode	TSPI_lineDial
Forwarding	TSPI_lineForward TSPI_lineGetAddressStatus <ul style="list-style-type: none"> <li>LINEFORWARDMODE_UNCOND</li> </ul>

The following TAPI functions are implemented due to requirements of the TAPI subsystem.

Other exported functions:

TSPI\_lineSendUserUserInfo

TSPI\_lineClose

TSPI\_lineCloseCall

TSPI\_lineConditionalMediaDetection

TSPI\_lineDevSpecific

TSPI\_lineDevSpecificFeature

TSPI\_lineGetDevConfig

TSPI\_lineSetDevConfig

TSPI\_lineGetAddressCaps

TSPI\_lineGetAddressStatus

TSPI\_lineGetAddressID

TSPI\_lineGetCallAddressID

TSPI\_lineGetCallInfo

TSPI\_lineGetCallStatus

TSPI\_lineGetDevCaps

TSPI\_lineGetExtensionID

TSPI\_lineGetIcon

TSPI\_lineGetID

TSPI\_lineGetNumAddressIDs

TSPI\_lineNegotiateExtVersion

TSPI\_lineNegotiateTSPIVersion

TSPI\_lineOpen

TSPI\_lineSelectExtVersion

TSPI\_lineSetDefaultMediaDetection

TSPI\_lineSetStatusMessages

TSPI\_lineSetAppSpecific

TSPI\_lineSetCallData

TSPI\_providerCreateLineDevice

TSPI\_providerEnumDevices

TSPI\_providerFreeDialogInstance

TSPI\_providerGenericDialogData

TSPI\_providerInit

TSPI\_providerShutdown

TSPI\_providerUIIdentify

TSPI\_lineGetCallIDs

TUISPI\_lineConfigDialog

TUISPI\_lineConfigDialogEdit

TUISPI\_providerConfig

TUISPI\_providerInstall

TUISPI\_providerRemove

TUISPI\_providerGenericDialog

TUISPI\_providerGenericDialogData

## 8 Info about estos ECSTA for Avaya CS1000

estos ECSTA for Avaya CS1000 is a product of estos GmbH.

Product updates can be found under <http://www.estos.de/>.

Frequently asked questions and answers, as well as support, can be found under <http://support.estos.de>.

### Diagnosis

Log files can be created for troubleshooting. These are stored under `c:\ecstaCS1000`.

Active Directory®, Microsoft®, Windows Server®, Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All brands and product names used in this document are for identification purposes only and may be trademarks or registered trademarks of their respective owners.