

estos ECSTA for OpenScape Voice


5.0.1.4942

1	Introduction	4
2	OpenScape Voice / Hipath 8000	6
2.1	General Settings	6
2.2	Advanced Settings	6
2.3	TAPI Lines	6
2.4	Office Code Settings	7
2.5	Configure PBX system	8
3	Settings	10
3.1	Licenses	10
3.2	Phone number format	10
4	Driver administration	13
5	PBX systems	14
6	Software requirements	15
6.1	Supported TAPI operations	15
7	Info about estos ECSTA for OpenScape Voice	19

1 Introduction

estos ECSTA for OpenScape Voice offers multiple Telephony Service Providers for Microsoft® TAPI 2.1 (also 2.2 and 3.0). These TAPI drivers implement a central communication between a PC and the Telephony system (PBX). On this Server, all devices from the PBX are shown as TAPI lines. All estos ECSTA for OpenScape Voice drivers use the powerful CSTA Interface to communicate with the PBX.

For installation and administration of the driver see Driver administration.

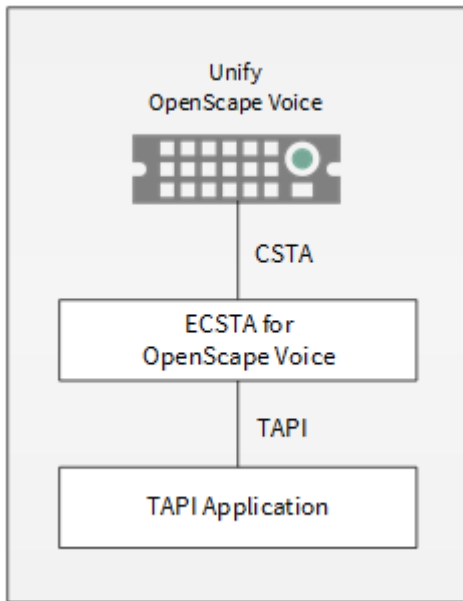

Supported PBX systems

All PBX systems of the Siemens Hipath 8000 / Unify OpenScape Voice family.

PBX	Driver
Hipath 8000 Version 3.1 and newer	ECSTA for OpenScape Voice
OpenScape Voice Version 3.1 or newer	ECSTA for OpenScape Voice

Using in the network

After installing the driver, you may use all configured line devices on the server as TAPI-lines. If you are using a server based CTI Software, you may install it now. To have the TAPI-devices available on all workstations, the TAPI-driver must be distributed in the network. There are the following options:

1. estos UCServer
The estos UCServer is a CTI/UCC server software which distributes the telephony information across the network using a graphical client or a multi-line TAPI driver. Workgroups, domains, Active Directory® and Terminal Server are supported.
2. estos CallControlGateway
The estos CallControlGateway for Lync/OCS is a gateway that connects the TAPI-lines with the Lync/OCS server. This enables the Lync/OCS client to use traditional telephone devices via Remote Call Control (RCC).

3. Windows® Telephony Server
The Windows® Telephony Server is a component of Windows® server operating systems since Windows® NT. You will need a domain. The service is limited to domain users.

2 OpenScape Voice/Hipath 8000

During setup of the driver for the OpenScape Voice proceed as follows:

1. Check network connection
Check the network connectivity to the CSTA Signaling Manager (ping hostname / IP Address).
2. Configuration of the OpenScape Voice Server
Check access to the CSTA Signaling Manager. Configure the subscribers for CSTA. Siehe Configure OpenScape Voice.
3. Driver installation
See also Settings

2.1 General Settings

The connection to the PBX system is established using TCP.
The connection is established directly to the CSTA Signaling Manager.

CSTA Signaling Manager

Enter the CSTA Manager Virtual IP 1. The default TCP port for the TCP connection is 1040.

See also OpenScape Voice Configuration.

2.2 Advanced Settings

Phone number format:

You may change the phone number format, that the driver reports to the applications. You may also change the phone numbers that are sent from the PC to the PBX. See Phone number formatting.

Advanced Parameters:

- Retry MonitorStart
In case the driver cannot start the monitoring of an extension for example because the extension is not connected to the PBX, the driver will retry the monitoring at regular intervals.
Enter a time interval in seconds.

2.3 TAPI Lines

Please add all Lines, that should be available as TAPI lines on the PC.

Manual Add/Remove Lines:

Select the Office Code, the extension belongs to. Enter the internal phone number of the extension. In the lower part of the window you see the appropriate OpenScape Service ID and the international phone number.

Extras - Query extensions for Office Codes:

You may read the available extensions directly from the PBX system. All subscribers will be read that are related to an Office Code.

Extras - Import Text:

You may import Text files. The content of the file must contain one phone number in each line. The phone numbers of the extensions must be fully international. For example

+49(89)7123-12345

+49(89)7123-12346

+49(89)7123-12347

Extras - Export Text:

You may export the actual line configuration to a text file.

Attention:

After the installation of the driver it may be necessary to restart the computer.

2.4 Office Code Settings

An Office Code is a prefix for a range of phone numbers for extensions. An Office Code is made from a Country Code, Area Code and Local Office Code.

An international phone number has the following format:

+Country Code(Area Code)Local Office Code-Extension

The lines of the estos ECSTA for OpenScape Voice are always represented as fully international phone numbers. The subscribers of the Hipath 8000 are represented as either international or national phone numbers.

The Office Codes are required to automatically read the available subscribers from the Hipath 8000 and to associate the international phone numbers with the appropriate Hipath 8000 Service ID.

Range of extensions

The Range of the extension phone numbers. First extension is for example 1000, last extension is 9999.

OpenScape Office Code

The parts of the Office Code as configured in the Hipath 8000.

Office Code International

The parts of the Office Code, to build an international phone number.

In most cases the configuration of the two Office Codes is equal.

Examples:

Examples	Germany	USA	Liechtenstein
International Phone Number	+49(89)722-12345	+1(991)882-1234	+423 9876-123
First Extension	10000	1000	100
Last Extension	19999	1999	999
Country Code	49	1	423
Area Code	89	991	
Local Office Code	722	882	9876

2.5 Configure PBX system

Validate CSTA Manager configuration

- Open the Common Management Portal
Open the Common Management Portal in a Web Browser and log on.
- Navigate to the CSTA Settings
Navigate to Hipath 8000 - Administration - Signaling Management - CSTA. Validate the Maximum Number of CSTA Sessions.

Maximum CSTA Sessions:	<input type="text" value="16"/>
Maximum Monitored Endpoints:	<input type="text" value="100000"/>
CSTA Manager Virtual IP 1:	<input type="text" value="10.20.10.115"/>
CSTA Manager Virtual IP 2:	<input type="text" value="10.20.10.116"/>
Connection Port:	<input type="text" value="1040"/>

Validate Subscriber configuration

- Open the Common Management Portal
Open the Common Management Portal in a Web Browser and log on.
- Navigate to the Subscribers
Navigate to Hipath 8000 - Business Group - Members - Subscribers. Open the configuration of a subscriber. CSTA must be enabled on the Services page in section General.

General	
<input type="radio"/> Account Code	No <input type="button" value="..."/>
<input type="radio"/> Authorization Code	No <input type="button" value="..."/>
<input checked="" type="radio"/> CSTA	Yes <input type="button" value="CSTA Over Sip"/>

The CSTA Type must be set according to the connected device.

OptiPoint	Siemens Type 1
OpenStage	CSTA Over SIP
Others	Normal

-

Detailed descriptions for Administration of CSTA and subscribers can be found in the Hipath 8000 / OpenScape Voice Administration manuals.

- Volume 2, Configuration and Administration using Common Management Portal and HiPath 8000 Assistant
- Volume 3, Volume 3, Configuration and Administration Using CLI Application-level Management

3 Settings

- General Settings
- Office Code Settings
- TAPI Lines
- Advanced Settings
- Settings Licenses
- Phone number format
- Configure PBX system

3.1 Licenses

You can test the driver for 45 days with 25 lines without a license and without other limitations. Once the trial period has expired, the lines will automatically be removed. You can purchase licenses codes and activate the driver permanently with them. To purchase licenses, please contact your dealer.

As many lines as desired may be configured in the driver. Opening a line requires a license. Once the existing licenses have been assigned to lines, opening more lines will not be allowed.

If you have added multiple driver instances, all instances will share the license specified. You can distribute the lines to any instance as you desire.

3.2 Phone number format

You may enter rules for formatting the phone numbers.

The phone numbers that are reported from the PBX system to the PC and the numbers that are sent from the PC to the PBX system may be modified with a Search and Replace function.

The phone numbers that are sent from the TAPI Application to the PBX (make call) may be modified as well.

Each line in the list contains an option if direct text compare or a regular expression is used.

The Search and Replace function uses regular expressions. If a search pattern matches, the result from replace with will be used as output. If the search pattern does not match, the original number will be reported unchanged. The entries in the list are processed one after each other. If one match is found the remaining entries will be ignored.

There are three categories:

- Incoming
This section is for phone number from incoming calls that are reported from the PBX system to the PC.
- Outgoing
This section is for phone number from outgoing calls that are reported from the PBX system to the PC.
- PC Dialing
This section is for phone numbers that are dialed on the PC and sent to the PBX system

Search for:

Enter the regular expression that will be used to match the phone number.

Hint: The Caret Sign (^) is located on the German keyboard on top left.

Here is a short description of the available expressions:

character	description
^	The beginning of the search string (phone number). The expression "^0" matches '0' only at the beginning of the search string.
^	The caret (^) immediately following the left-bracket ([]) has a different meaning. It is used to exclude the remaining characters within brackets from matching the target string. The expression "[^0-8]" indicates that the target character should not be 0
\$	The dollar sign (\$) will match the end of the string. The expression "152\$" will match the sub-string "152" only if it is at the end of the string.
	The alternation character () allows either expression on its side to match the target string. The expression "1 2" will match '1' as well as '2'.
.	The dot (.) will match any character.
*	The asterisk (*) indicates that the character to the left of the asterisk in the expression should match 0 or more times.
+	The plus (+) is similar to asterisk but there should be at least one match of the character to the left of the + sign in the expression.
?	The question mark (?) matches the character to its left 0 or 1 times.
()	The parenthesis affects the order of pattern evaluation and also serves as a tagged expression that can be used when replacing the matched sub-string with another expression.
[]	Brackets ([and]) enclosing a set of characters indicates that any of the enclosed characters may match the target character.

Replace with:

Enter the expression how the output of the phone number should look like.

\1 represents the first matched expression enclosed by parentheses '(') from the *search pattern* field.

\2 the second ...

Check:

You may check your expressions right here by entering a phone number in the indicate field. The resulting output will be displayed. If the expression from the search pattern is not found, the phone number will be send to the output without modification.

Examples:

Effect	search pattern	replace with
--------	----------------	--------------

Remove a leading 0 from the phone number	<code>^0(.*)</code>	<code>\1</code>
Replace a leading 80 at the beginning of the phone number by a 0	<code>^80(.*)</code>	<code>0\1</code>
Remove a private pin number that may be identified by a 50 followed by a 3 digit pin.	<code>^50[0-9][0-9][0-9](.*)</code>	<code>\1</code>
Suppress all phone numbers that are internal (not more than 3 digits).	<code>^[0-9][0-9][0-9]\$</code>	
Add an access code (leading 0) to all numbers with more than 3 digits (e.g. all external numbers).	<code>^([0-9][0-9][0-9][0-9].+)</code>	<code>0\1</code>
Add an area code and prefix (03012345) to all internal numbers (1 to 3 digits).	<code>^([0-9][0-9]?[0-9]?)\$</code>	<code>03012345\1</code>
Adding an area code to all numbers not beginning with 0 and containing at least 4 digits (thus not internal).	<code>^[^0][0-9][0-9][0-9][0-9].*</code>	<code>08151\1</code>

4 Driver administration

Installation

The driver is installed on the system with the Windows® Installer (msi) Packet. If the Setup Packet contains several drivers then you can choose during Setup which drivers are to be installed.

Driver instance

The driver can be used to connect one or several phone systems. For this purpose one or several driver instances are registered in Windows® Tapi System.

Register at Tapi System

During the installation, an instance in the already selected driver is registered at the Tapi System. For this purpose you indicate the necessary data in a Wizard in order to connect the driver with the telephone system.

Configuration of driver instance

The configuration of the driver instances takes place either via *Telephone and Modem options* in the Control Panel or via the provided program *Advanced Telephone Driver options*, that can be found in the Control Panel or Start menu.

Add further driver instances

If you want to connect the computer with a further telephone system, you must add a further instance of the driver to the Tapi system. This takes place with the aid of the provided program *Advanced Telephone Driver options*, that can be found in the Control Panel or in the Start menu.

Updates

To install an Update start the Windows® Installer Packet (msi).

If a driver instance is configured, this is removed during the update and is added after the update automatically again. If several drivers instances are configured, the computer must be restarted after the update.

Deinstallation

Deinstallation takes place via Windows® Software Administration. In the Deinstallation, all instances of the driver are removed from the Tapi System and the software is uninstalled.

5 PBX systems

PBX	Driver
Hipath 8000 Version 3.1 and newer	ECSTA for OpenScape Voice
OpenScape Voice Version 3.1 or newer	ECSTA for OpenScape Voice

6 Software requirements

The estos ECSTA for OpenScape Voice can be installed on all Windows® systems that support Microsoft® TAPI 2.0 or higher. The following systems are supported in 32- as well as in 64-bit versions.

- Windows® 7 Service Pack 1
- Windows® 8.1
- Windows® 10
- Windows Server® 2008 R2
- Windows Server® 2012
- Windows Server® 2012 R2
- Windows Server® 2016

6.1 Supported TAPI operations

This driver supports the following TAPI call control functions.

Action:	Corresponding TAPI function:
Dial	TSPI_lineMakecall
Hang up	TSPI_lineDrop
Answer call	TSPI_lineAnswer
Hold call	TSPI_lineHold
Retrieve call	TSPI_lineUnhold
Redirect call	TSPI_lineRedirect
Blind transfer	TSPI_lineBlindTransfer
Setup transfer	TSPI_lineSetupTransfer
Swap hold	TSPI_lineSwapHold
Complete transfer	TSPI_lineCompleteTransfer (LINETRANSFERMODE_TRANSFER)
Create conference	TSPI_lineCompleteTransfer (LINETRANSFERMODE_CONFERENCE)
Add to conference	TSPI_lineAddToConference
Remove from conference	TSPI_lineRemoveFromConference
Pickup	TSPI_linePickup

DTMF dialing	TSPI_lineGenerateDigits
Dial in dial tone mode	TSPI_lineDial
Forwarding	TSPI_lineForward TSPI_lineGetAddressStatus
Message waiting	TSPI_lineSetLineDevStatus TSPI_lineGetLineDevStatus

The following TAPI functions are implemented due to requirements of the TAPI subsystem.

Other functions exported by the driver:

TSPI_lineSendUserUser Info
TSPI_lineClose
TSPI_lineCloseCall
TSPI_lineConditionalMediaDetection
TSPI_lineDevSpecific
TSPI_lineDevSpecificFeature
TSPI_lineGetDevConfig
TSPI_lineSetDevConfig
TSPI_lineGetAddressCaps
TSPI_lineGetAddressStatus
TSPI_lineGetAddressID
TSPI_lineGetCallAddressID
TSPI_lineGetCallInfo
TSPI_lineGetCallStatus
TSPI_lineGetDevCaps
TSPI_lineGetExtensionID

TSPI_lineGetIcon

TSPI_lineGetID

TSPI_lineGetNumAddressIDs

TSPI_lineNegotiateExtVersion

TSPI_lineNegotiateTSPIVersion

TSPI_lineOpen

TSPI_lineSelectExtVersion

TSPI_lineSetDefaultMediaDetection

TSPI_lineSetStatusMessages

TSPI_lineSetAppSpecific

TSPI_lineSetCallData

TSPI_providerCreateLineDevice

TSPI_providerEnumDevices

TSPI_providerFreeDialogInstance

TSPI_providerGenericDialogData

TSPI_providerInit

TSPI_providerShutdown

TSPI_providerUIIdentify

TSPI_lineGetCallIDs

TUISPI_lineConfigDialog

TUISPI_lineConfigDialogEdit

TUISPI_providerConfig

TUISPI_providerInstall

TUISPI_providerRemove

TUISPI_providerGenericDialog

TUISPI_providerGenericDialogData

7 Info about estos ECSTA for OpenScape Voice

estos ECSTA for OpenScape Voice is a product of estos GmbH.

Product updates can be found under <http://www.estos.de>.

Frequently asked questions and answers, as well as support, can be found under <https://www.estos.de/service>.

Logging

To troubleshoot Log files can be created. These are stored in the specified path.

You may enter comma separated phone numbers in the 'Log Filter' field. In case you have entered phone numbers here, the log files will only contain relevant information for these extensions.

Active Directory®, Microsoft®, Windows Server®, Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All brands and product names used in this document are for identification purposes only and may be trademarks or registered trademarks of their respective owners.